


BK3000 Part List

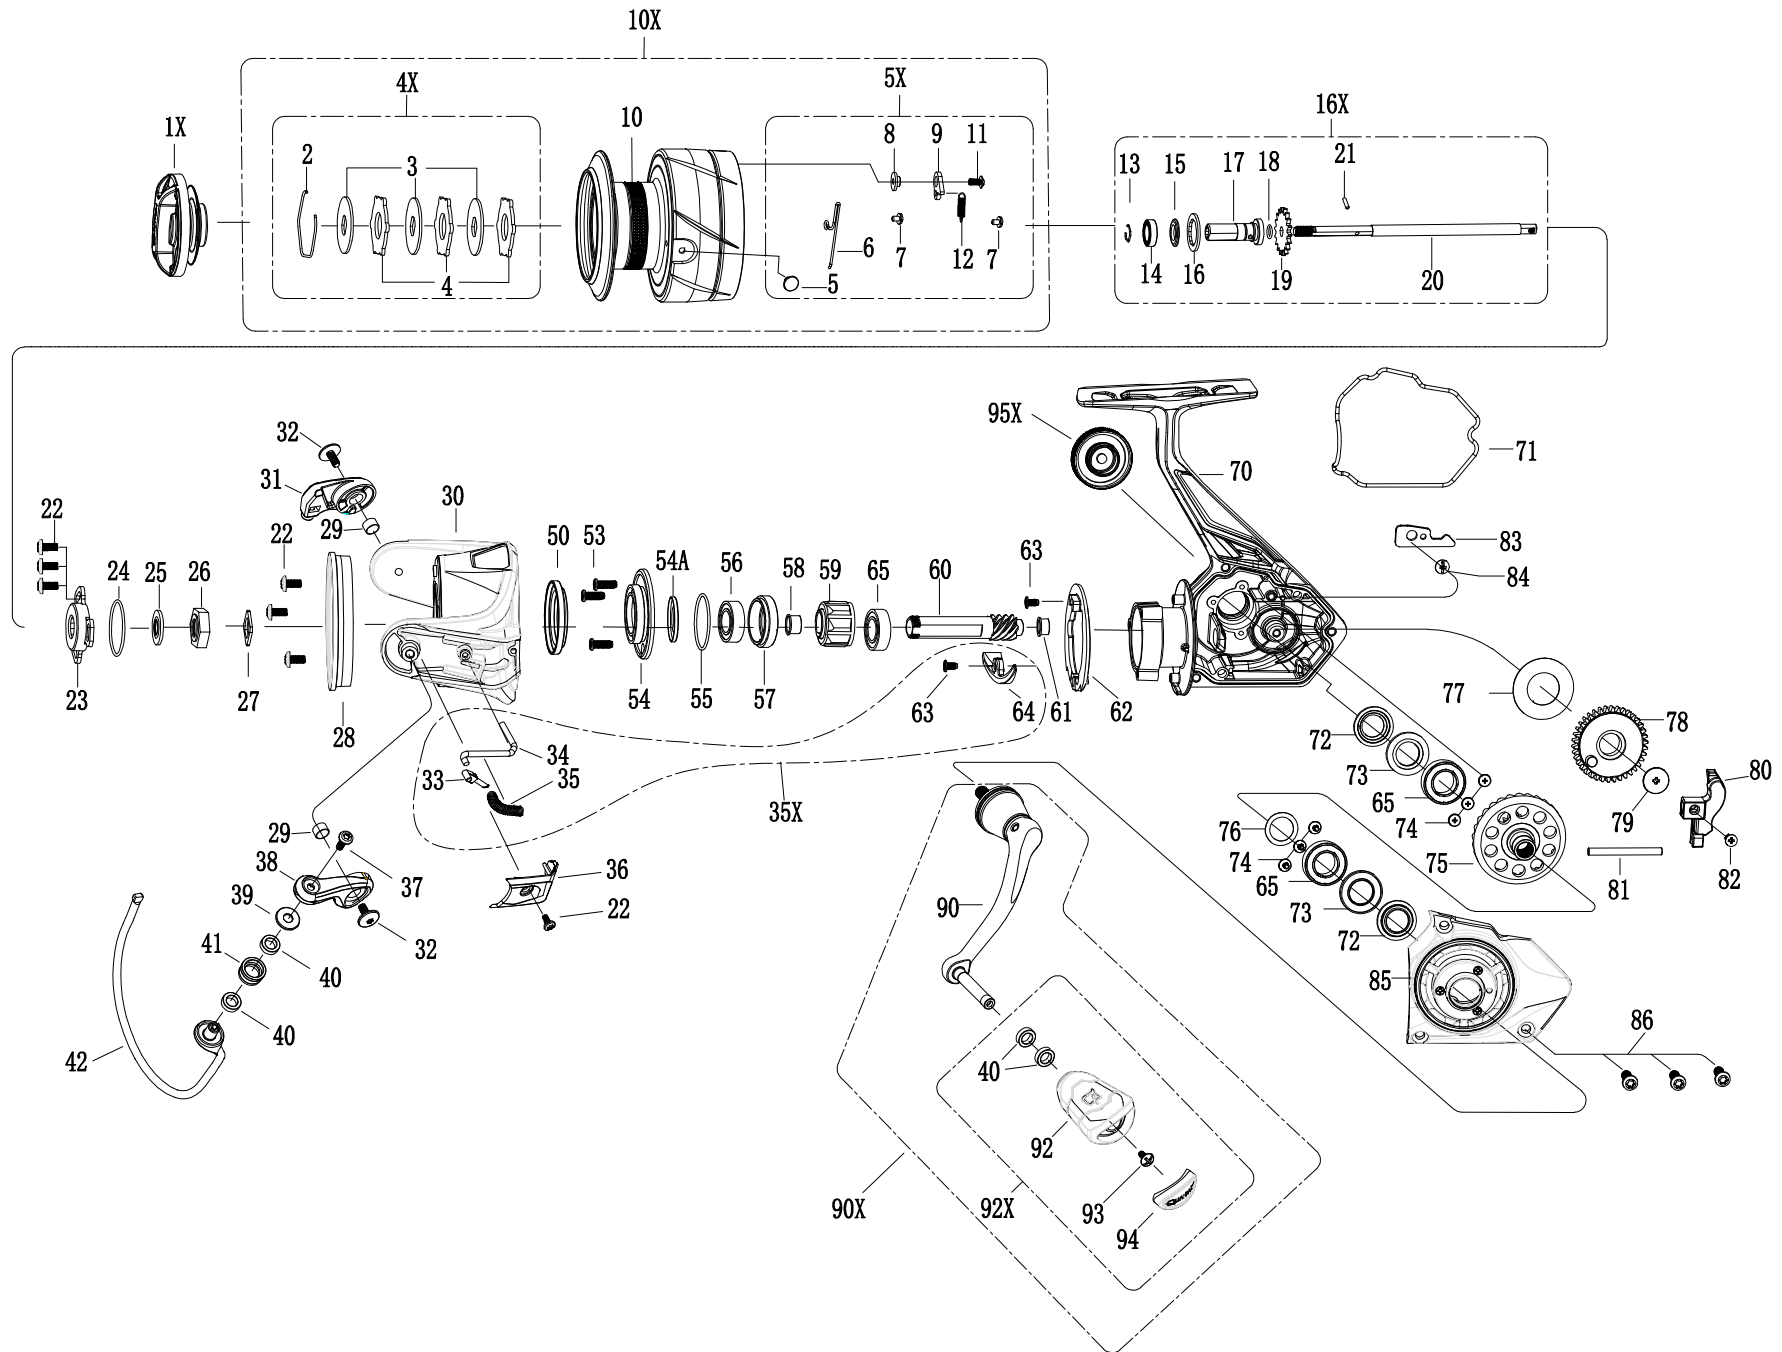

QUANTUM - Quick Kits			
KEY NO.	DESCRIPTION	PART NUMBER	QTY.
1X	DRAG KNOB ASSEMBLY	HAN332-01A	1
4X	DRAG KIT	JAN380-01A	1
2	Retaining Ring		1
3	Drag Washer "D" (3 pk)		1
4	Drag Washer "B" (3pk)		1
5X	SPOOL CLICKER & LINE CLIP KIT	HAN303-01A	1
5	Line Clip		1
6	Line Clip Spring		1
7	Line Clip Screw (3 pk)		1
8	Clicker Holder		1
9	Clicker		1
11	Clicker Screw (3pk)		1
12	Clicker Spring		1
10X	SPOOL ASSEMBLY	HAN421-01A	1
4X	Drag Kit		1
10	Spool Sub Assembly		1
5X	Spool Click/Clip Kit		1
16X	SPOOL SUPPORT KIT	HAN315-01A	1
13	Retainer Ring		1
14	Spool Ball Bearing		1
15	Spool Ball Bearing Seal		1
16	Spool Adjust Washer		1
17	Spool Insert		1
18	O-Ring		1
19	Click Gear		1
20	Main Shaft		1
21	Spool Insert Pin		1
35X	BAIL TRIP KIT	HAN319-01A	1
33	Cam		1
34	Kick Lever		1
35	Bail Spring		1
63	Rotor Brake Screw (3 pk)		1
64	Trip Bumper		1
90X	HANDLE ASSEMBLY	HAN418-01A	1
90	Handle Arm Sub-Assembly		1
92X	Handle Knob Sub-Assembly		1
92X	HANDLE KNOB KIT	HAN313-01A	1
40	Bushing		2
92	Handle Knob		1
93	Handle Knob Screw (3pk)		1
94	Handle Knob Badge		1
95X	DUST CAP ASSEMBLY	JAN373-01A	1

PART LIST -- BK3000				
KEY NO.	DESCRIPTION	PART NUMBER	QTY.	
1X	Drag Knob Assembly	JAN332-01A	1	
2	Retaining Ring	JAN172-01A	1	
3	Drag Washer "D" (3 pk)	JAN080-01A-KIT	1	
4	Drag Washer "B" (3pk)	JAN033-01A-KIT	1	
5	Line Clip	JAN128-01A	1	
6	Line Clip Spring	JAN049-01A	1	
7	Line Clip Screw (3 pk)	JAN114-01A-KIT	1	
8	Clicker Holder	JAN204-01A	1	
9	Clicker	JAN103-01A	1	
10	Spool Sub Assembly -- Use 10X	HAN321-01A	1	
11	Clicker Screw (3pk)	HAN246-01A-KIT	1	
12	Clicker Spring	JAN068-01A	1	
13	Retainer Ring	JAN038-01A	1	
14	Spool Ball Bearing	JAN027-01A	1	
15	Spool Ball Bearing Seal	JAN251-01A	1	
16	Spool Adjust Washer	JAN030-01A	1	
17	Spool Insert	HAN213-01A	1	
18	O-Ring	HAN266-01A	1	
19	Click Gear	JAN037-01A	1	
20	Main Shaft	HAN015-01A	1	
21	Spool Insert Pin	JAN042-01A	1	
22	Rotor Cover Screw (3 pk)	JAN077-01A-KIT	3	
23	Rotor Nut Retainer	JAN118-01A	1	
24	Rotor Nut Retainer Seal	JAN265-01A	1	
25	Rotor Nut Seal	JAN264-01A	1	
26	Rotor Nut	JAN006-01A	1	
27	Rotor Lock Washer	JAN065-01A	1	
28	Rotor Ring	HAN179-01A	1	
29	Bail Holder/Bail Arm Bushing	JAN259-01A	2	
30	Rotor	HAN009-01A	1	
31	Bail Holder	JAN017-01A	1	
32	Arm Lever Screw (3pk)	JAN225-01A-KIT	1	
33	Cam	JAN031-01A	1	
34	Kick Lever	HAN019-01A	1	
35	Bail Spring	JAN022-01A	1	
36	Rotor Cover	HAN087-01A	1	
37	Line Roller Screw(3pk)	JAN108-01A-KIT	1	
38	Arm Lever	JAN007-01A	1	
39	Line Roller Washer	HAN102-01A	1	
40	Bushing	JAN016-01A	4	
41	Line Roller	JAN004-01A	1	
42	Bail Wire Assembly	HAN347-01A	1	
50	Seal	JAN252-01A	1	
51	Pinion Ball Bearing Holder Screw (3 pk)	HAN051-01A-KIT	1	
54	Pinion Ball Bearing Holder	HAN122-01A	1	
54A	Bushing	HAN078-01A	1	
55	Pinion Ball Bearing Holder Seal	HAN263-01A	1	
56	Pinion Ball Bearing	JAN028-01A	1	
57	Pinion Ball Bearing Retainer	HAN040-01A	1	
58	Pinion Bushing_Top	JAN029-01A	1	
59	Clutch Unit	HAN463-01A	1	
60	Pinion	GAN011-01A	1	
61	Main Shaft Bushing	JAN227-01A	1	
62	Rotor Brake	HAN145-01A	1	
63	Rotor Brake Screw (3 pk)	JAN135-01A-KIT	1	
64	Trip Bumper	HAN119-01A	1	
65	Drive Gear Ball Bearing	JAN058-11A	3	
70	Body Sub Assembly	HAN301-01A	1	
71	Side Cover Seal	HAN254-01A	1	
72	Drive Gear Ball Bearing Seal	JAN262-01A	2	
73	Drive Gear Ball Bearing Seal Plate	JAN255-01A	2	
74	Drive Gear Ball Bearing Screw (3 pk)	JAN220-01A-KIT	2	
75	Drive Gear	HAN312-01A	1	
76	Drive Gear Adjustment Washer	JAN045-01A	1	
77	O/S Gear Washer	HAN158-01A	1	
78	O/S Gear Assembly	HAN353-01A	1	
79	O/S Gear Screw(3pk)	JAN111-01A-KIT	1	
80	O/S Slider	HAN025-01A	1	
81	Guide Pin	HAN211-01A	1	
82	Main Shaft Screw(3pk)	JAN100-01A-KIT	1	
83	O/S Slider Plate	HAN084-01A	1	
84	O/S Slider Plate Screw(3pk)	JAN085-01A-KIT	1	
85	Side Cover Sub-Assembly	HAN323-01A	1	
86	Side Cover Screw (3pk)	HAN057-01A-KIT	1	
90	Handle Arm Sub-Assembly	HAN318-01A	1	
92	Handle Knob	HAN013-01A	1	
93	Handle Knob Screw (3pk)	JAN085-01A-KIT	1	
94	Handle Knob Badge	HAN169-01A	1	
95X	Dust Cap Assembly	JAN373-01A	1	